

Communication-capable globe valve actuator for 2-way and 3-way globe valves

- Actuating force 2500 N
- Nominal voltage AC/DC 24 V
- Control modulating DC (0) 0.5 V...10 V, variable
- · Nominal stroke 40 mm



MP/27BUS*

Technical data			
	Electrical data	Nominal voltage	AC/DC 24 V
		Nominal voltage frequency	50/60 Hz
		Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V
		Power consumption in operation	4 W
		Power consumption in rest position	1.5 W
		Power consumption for wire sizing	6 VA
		Connection supply / control	Terminals 4 mm² and cable 1 m, 4 x 0.75 mm²
		Parallel operation	Yes
	Functional data	Actuating force	2500 N
		Positioning signal Y	DC 010 V
		Positioning signal Y note	Input impedance 100 kΩ
		Operating range Y	DC 0.510 V
		Operating range Y variable	Start point DC 0.5 30V
			End point DC 2.5 32V
		Position feedback U	DC 0.510 V
		Position feedback U note	max. 0.5 mA
		Position feedback U variable	Start point DC 0.5 8V
			End point DC 2.5 10V
		Position accuracy	5% absolute
		Manual override	Gear disengagement with push-button, can be
		Name and studies	locked
		Nominal stroke	40 mm 150 s / 40 mm
		Actuating time	100 %
		Override control MAX (maximum position)	100 %
		Override control MIN (minimum position)	0 %
		Override control ZS (intermediate position, only AC)	50 %
		Override control ZS variable	ZS = MIN MAX
		Sound power level motor max.	55 dB (A)
		Sound power level motor note	55 dB (A) @ 90 s running time
		Position indication	Mechanical 5 40 mm stroke
	Safety	Protection class IEC/EN	III Safety extra-low voltage
		Degree of protection IEC/EN	IP54
		EMC	CE in accordance with 2004/108/EC
		Certification IEC/EN	Certified to: IEC/EN 60730-1 and IEC/EN 60730-2-14
		Mode of operation	Type 1
		Rated impulse voltage supply / control	0.8 kV
		Control pollution degree	3
		Ambient temperature	0°C 50°C
		Non-operating temperature	-40°C 80°C
		Ambient humidity	95% r.h., non-condensing
		Maintenance	Maintenance-free
	Weight	Weight approx.	4.320 kg

Globe valve actuator, communicative, modulating, AC/ DC 24 V, 2500 N



Safety notes



- This actuator has been designed for application in stationary heating, ventilation and air-conditioning systems and is not allowed to be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.
- The switch for changing the direction of motion/the closing point may be adjusted only by authorised personnel. The direction of stroke is critical, particularly in connection with frost protection circuits.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- The device contains electrical and electronic components and is not allowed to be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Prod		f4.	
Pron	пи	TASTI	III

Principle of operation The actuator is connected with a standard modulating signal of DC 0 ... 10V and

travels to the position defined by the positioning signal. The measuring voltage U serves for the electrical display of the actuator position 0 ... 100% and as slave control

signal for other actuators.

Adjustable-parameter actuators The factory settings cover the most common applications. Input and output signals

and other parameters can be altered with the PC-Tool MFT-P or with the service tool

ZTH-GEN.

Simple direct mounting on the globe valve by means of form-fit hollow clamping jaws. **Direct mounting**

The actuator can be rotated by 360° on the valve neck.

Manual override with push-button possible - temporary, permanently. The gear is Manual override

> disengaged and the actuator decoupled for as long as the button is pressed / latched. The stroke can be adjusted by using a hexagon socket screw key (5 mm), which is inserted into the top of the actuator. The stroke spindle extends when the key is

rotated clockwise.

High functional reliability The actuator is overload protected, requires no limit switches and automatically stops

when the end stop is reached.

Combination valve/actuator Refer to the valve documentation for suitable valves, their permitted medium

temperatures and closing pressures.

Position indication The stroke is indicated mechanically on the bracket with tabs. The stroke range

adjusts itself automatically during operation.

Home position Setting ex-works: Actuator spindle is retracted.

When valve-actuator combinations are shipped, the direction of motion is set in

accordance with the closing point of the valve.

Direction of stroke switch When actuated, the direction of stroke switch changes the running direction in normal

operation.

Adaption of stroke range The first time the supply voltage is switched on, i.e. at the time of commissioning, the

actuator carries out a stroke adaption, which is when the operating range and position

feedback adjust themselves to the mechanical stroke. Manual triggering of the adaption can be carried out by pressing the "Adaption" button

or with the PC-Tool.

The actuator then moves into the position defined by the positioning signal.

Accessories

Electrical accessors and a	A 22 - 21-1	
Electrical accessories	Auxiliary switch add-on, 2 x SF	
Service tools	Manual parameterizing device	

Description	Туре
Auxiliary switch add-on, 2 x SPDT	S2A-H
Manual parameterizing device, for MF/MP/Modbus/LonWorks actuators	ZTH-GEN
and VAV-Control	
Belimo PC-Tool, software for adjustments and diagnostics	MFT-P



Electrical installation




Notes

- · Connection via safety isolating transformer.
- · Parallel connection of other actuators possible.
- · Direction of stroke switch factory setting: Actuator spindle retracted.

Wiring diagrams


AC/DC 24V, modulating

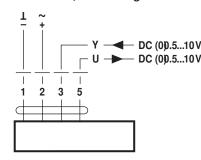

Cable colours:

- 1 = black
- 2 = red
- 3 = white
- 5 = orange

Operation on the MP bus

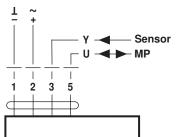

Cable colours:


- 1 = black
- 2 = red
- 3 = white
- 5 = orange


Functions

Functions with basic values

Override control with AC 24V with relay contacts


Override control with AC 24V with rotary switch

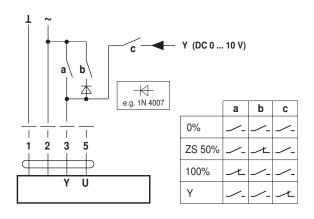


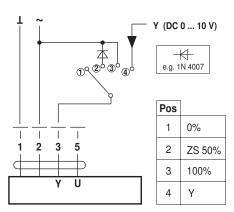

Remote control 0 ... 100%

Follow-up control (position-dependent)

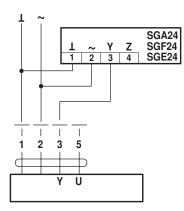


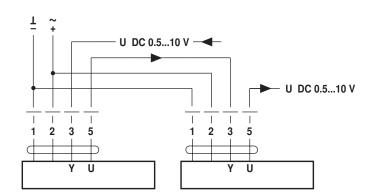



Functions


Control with 4 ... 20 mA via external resistor

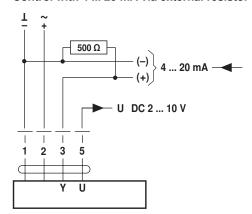


The 500 Ω resistor converts the 4 ... 20 mA current signal to a voltage signal DC 2 ... 10 V

Functions for actuators with specific parameters

Override control and limiting with AC 24V with relay contacts

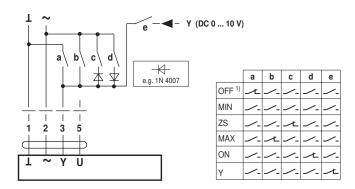

Override control and limiting with AC 24V with rotary switch

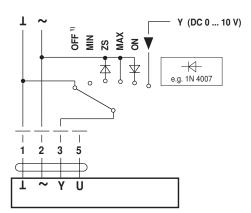


1) Caution: This function is guaranteed only if the start point of the operating range is defined as min. 0.6V.



Functions


AC 24V; 3-point

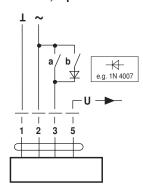

3	5	(Pa)	(A)
a	b		
1	_/_	+	†
/		_	
	4	A	1
			•

Functions when operated on MP bus


Connection on the MP bus

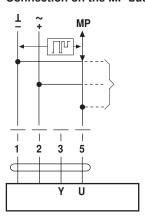

Supply and communication in one and the same 3-wire cable


- no shielding or twisting required
- no terminating resister required

 Power topology




There are no restrictions for the network topology (star, ring, tree or mixed forms are permitted).

Connection of active sensors

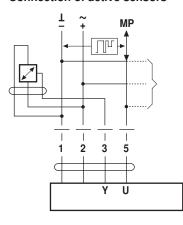


- Supply AC/DC 24 A
- Output signal DC 0 ... 10V (max. DC 0 ... 32V)
- Resolution 30 mV

Connection of external switching contact

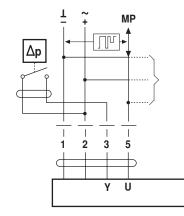

- Switching current 16 mA @ 24V
- Start point of the operating range must be parameterised on the MP actuator as ≥ 0.6V

Connection of passive sensors

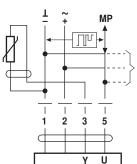


Ni1000	−28 +98°C	850 1600 Ω ²⁾
PT1000	−35 +155°C	850 1600 Ω ²⁾
NTC	-10 +160°C ¹⁾	200 Ω 50 kΩ ²⁾

- 1) Depending on the type
- 2) Resolution 1 Ohm



Indicators and operating controls

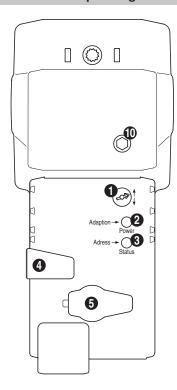

(1) Direction of stroke switch

Switching: Direction of stroke changes

(2) Push-button and LED display green

Off: No power supply or malfunction Illuminated in green: In operation

Press button: Triggers stroke adaption, followed by standard mode

(3) Push-button and LED display yellow

Off: Standard mode

Flickering: MP communication active Illuminated: Adaption procedure active

Blinking: Request for addressing from MP master

Press button: Confirmation of addressing

(4) Gear disengagement button

Press button: Gear disengages, motor stops, manual override possible

Release button: Gear engages, standard mode

(5) Service plug

For connecting the parameterisation and service tools

(10) Manual override

Clockwise: Actuator spindle extends Counterclockwise: Actuator spindle retracts


LED displays (2, green) and (3, yellow)

green: Off; yellow: Illuminated;

Check the supply connections. The phases may have been switched.

Dimensions [mm]

Dimensional drawings

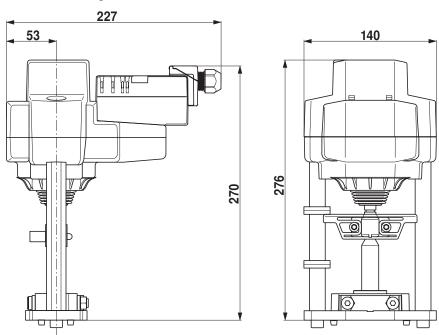



Further documentation


6


- Data sheets for globe valves
- Installation instructions for actuators and/or globe valves, respectively
- Notes for project planning, 2-way and 3-way globe valves
- · Overview "Valve-actuator combinations"




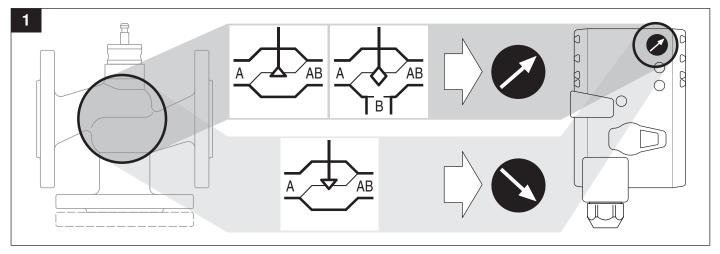

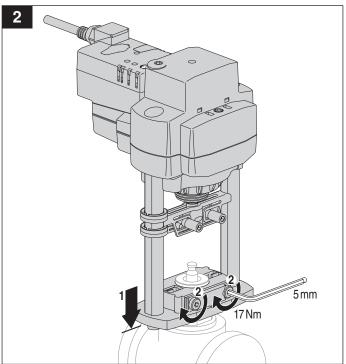

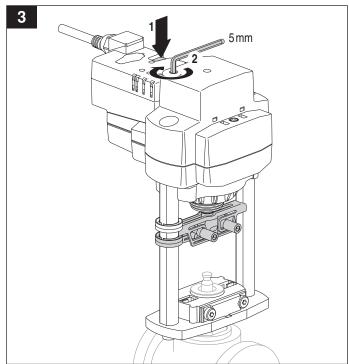

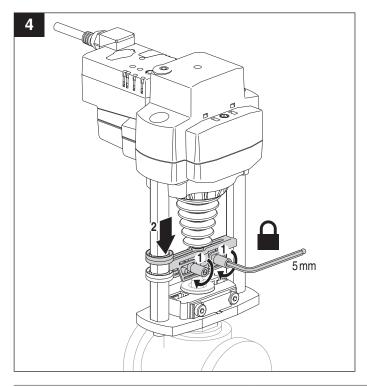


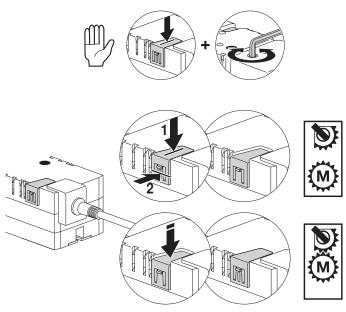







AC 24 V / DC 24 V

 

AC 230 V

 


SVL(C)230A EV(C)230A

 


AC 24 V / DC 24 V

  $\bigcirc ^{\dagger a}_{\downarrow b} \bigcirc ^{\dagger a}_{\downarrow b}$




AC 230 V

 


SVL(C)230A EV(C)230A



AC 24 V / DC 24 V

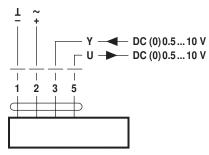

SVL(C)24A-SZ SVL(C)24A-MF EV(C)24A-SZ EV(C)24A-MF RV24A-SZ RV24A-MF

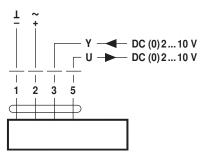

SVL(C)24A-SR EV(C)24A-SR RV24A-SR

