
DP2500 – DP0100 – DP0250

Differential Pressure Transmitter

The DP Low Differential Pressure Transmitter series is an accurate and cost competitive solution for measuring low pressures of air and non-aggressive gases in order to monitor and control pressures in building automation, HVAC and clean room systems.

The DP series accurately measures low differential pressure and converts the measurement into a standard proportional 0...10 V signal or 4...20mA.

The various pressure measurement range are field selectable with jumpers.



- **8 measurement ranges in one device**

- Allow selection of best input range for application

- **4 digit display**

- Shows differential pressure

- **AutoZero option**

- Makes the DP transmitter maintenance free

- **Response time selectable**

- Allow to cover all the customer needs

- **Easy mounting**

- No expert required , reduce time and cost

- **IP54**

- It can be mounted and several environments

- **Span Point Adjustment (only for DP0100-AZ-(D)-SP models)**

- The output's drift can be adjusted

Ordering Codes

Single Pack with Standard Accessories

Codes	Description	Span Point	Auto Zero	Display	Selectable Range in Pa								
					-50...+50	-100...+100	0...100	0...250	0...500	0...1000	0...1500	0...2000	0...2500
DP2500-R8	Differential Pressure Sensor, with 8 Ranges - Single Pack	--	--	--	--	X	X	X	X	X	X	X	X
DP2500-R8-AZ	Differential Pressure Sensor, with 8 Ranges and AutoZero feature - Single Pack	--	X	--	--	X	X	X	X	X	X	X	X
DP2500-R8-D	Differential Pressure Sensor, with 8 Ranges and Display - Single Pack	--	--	X	--	X	X	X	X	X	X	X	X
DP2500-R8-AZ-D	Differential Pressure Sensor, with 8 Ranges and AutoZero feature and Display - Single Pack	--	X	X	--	X	X	X	X	X	X	X	X
DP0100-AZ	Differential Pressure Sensor, with 2 Ranges (+/-) and AutoZero feature - Single Pack	--	X	--	X	X	--	--	--	--	--	--	--
DP0100-AZ-D	Differential Pressure Sensor, with 2 Ranges (+/-) and AutoZero features and Display - Single Pack	--	X	X	X	X	--	--	--	--	--	--	--
DP0250-AZ	Differential Pressure Sensor, with 2 Ranges and AutoZero feature - Single Pack	--	X	--	--	--	X	X	--	--	--	--	--
DP0250-AZ-D	Differential Pressure Sensor, with 2 Ranges and AutoZero feature and Display - Single Pack	--	X	X	--	--	X	X	--	--	--	--	--
DP0100-AZ-SP	Differential Pressure Sensor, with 2 Ranges (+/-) and AutoZero feature and Span point adjustment - Single Pack	X	X	--	X	X	--	--	--	--	--	--	--
DP0100-AZ-D-SP	Differential Pressure Sensor, with 2 Ranges (+/-) and AutoZero features and Display and Span Point adjustment - Single Pack	X	X	X	X	X	--	--	--	--	--	--	--

Standard accessories:

- 2 fixing screws
- 2 plastic tube connectors
- 2 m tube \varnothing 4 / 7 mm

Bulk Pack without Standard Accessories

Codes	Description	Span Point	Auto Zero	Display	Selectable Range in Pa								
					-50...+50	-100...+100	0...100	0...250	0...500	0...1000	0...1500	0...2000	0...2500
DP2500-R8-01	Differential Pressure Sensor, with 8 Ranges - Bulk Pack - 46 pcs	--	--	--	--	X	X	X	X	X	X	X	X
DP2500-R8-AZ-01	Differential Pressure Sensor, with 8 Ranges and AutoZero feature - Bulk Pack - 46 pcs	--	X	--	--	X	X	X	X	X	X	X	X
DP0100-AZ-01	Differential Pressure Sensor, with 2 Ranges (+/-) and AutoZero feature - Bulk Pack - 46 pcs	--	X	--	X	X	--	--	--	--	--	--	--

Application

This product converts the differential pressure between the + / - pressure ports to an analog output signal.

The DP differential pressure transmitter contains a micro-machine, single-crystal silicon, piezoresistive pressure sensor with strain gauges to change resistance as a function of applied pressure.


Installation

The installation of electrical wiring must conform to local codes and should be carried out by authorized personnel only. Users should ensure that all Johnson Controls products are used safely and without risk to health or property.

The DP series differential pressure transmitter are intended to provide input to equipment under normal operating conditions.

Where failure or malfunction of an DP series differential pressure transmitter could lead to an abnormal operating condition that could cause personal injury or damage to the equipment or other property, other devices (limit or safety controls) or systems (alarm or supervisory) intended to warn of, or protect against, failure or malfunction of the DP series must be incorporated into and maintained as part of the control system.

Dimensions

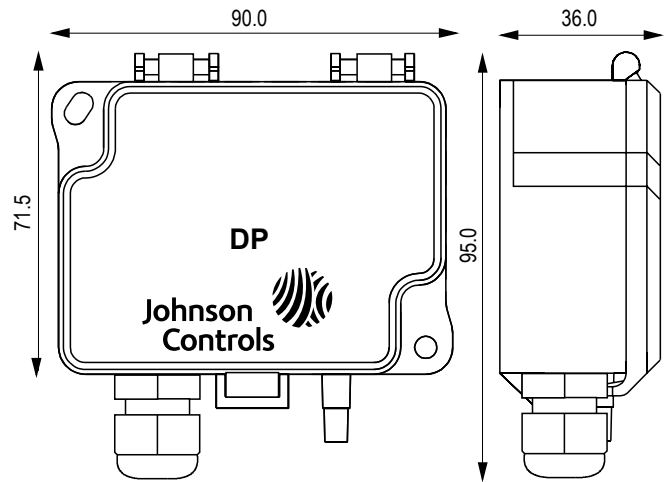

Wirings


Before connecting or disconnecting any wires, ensure that all power supplies have been switched off and all wires are potential-free to prevent equipment damage and avoid electrical shock.

Terminations are made on the terminal blocks in the base of the module, which accept up to 1.5 mm² wires.

Follow the wiring diagrams shown in the figure below.

All wiring to the module is at extra low (safe) voltage and must be separated from power line voltage wiring. Do not run wiring close to transformers or high frequency generating equipment.


Complete and verify all wiring connections before applying power to the controller to which the module is connected.

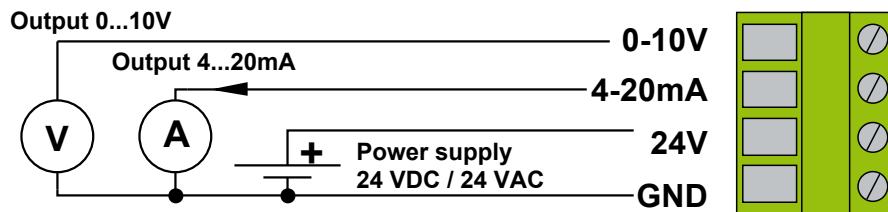

Operation

Selecting Pressure Range

To adjust the pressure range, set the jumpers as shown.

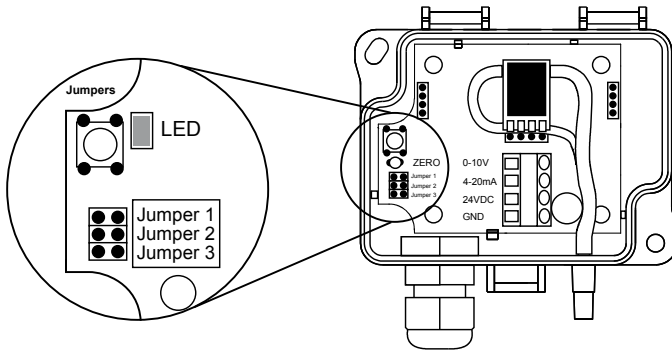

The pressure values on the sticker depends on the model

-100...+100Pa	100Pa	250Pa	500Pa	Jumper 1 Jumper 2 Jumper 3
1000Pa	1500Pa	2000Pa	2500Pa	Jumper 1 Jumper 2 Jumper 3

Zeroing

It is recommended to adjust the zero point every 12 months during normal operation.

How to do:

Note! Supply voltage must be connected one hour before the 0-point adjustment is carried out.

- 1) Loose both tubes from the pressure inlets + and -.
- 2) Push zero button >4 seconds and the red led turns ON.
- 3) Wait until LED turns off and then install tubes again to the pressure inlets.

AutoZero (-AZ) option

Optional auto zero function makes the DP transmitter maintenance free for periodical zero point adjustment. Element automatically adjusts the transmitters zero point from time to time, this eliminates the zero point long term drift of the piezoresistive sensing element. Zero point adjustment is carried out every 10 minutes. During zero point adjustment the output and display values will freeze to the latest measured value. The automatic zero point adjustment takes 4 seconds. During this time power consumption can be up to 1,7 W.

Span Point Adjustment

The span point can be adjusted $\pm 5\%$ by the span trimmer.

This enables an end user to reach the best accuracy.




1. Connect the input pressure.
2. Read the actual pressure from a reference meter.
3. Adjust the DP display (or output signal) to showing the same as the value of reference meter.

Response time selection


DP2500 Series

This model is equipped of a push button for response time selection (0.8 or 4 sec).

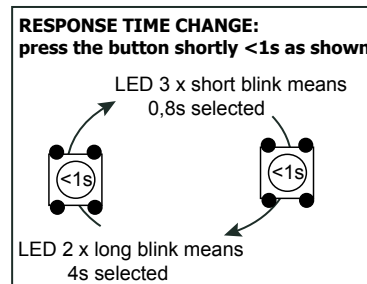

DP0100 and DP0250 Series

This models are equipped of a jumper for response time selection (0.8 or 4 sec).

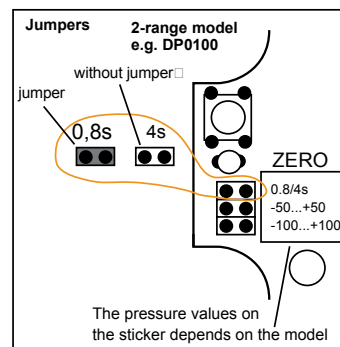

Display (-D) option

For local differential pressure visualization there are optional models (-D versions) with a 4-digit display.

All values indicated in this LCD display are as default in Pascal.

Technical Specification

Pressure Ranges	DP2500	DP0100	DP0250
	-100...+100Pa 0...100 Pa 0...250 Pa 0...500 Pa 0...1000 Pa 0...1500 Pa 0...2000 Pa 0...2500 Pa	-50...+50 Pa -100...+100 Pa	0...100 Pa 0...250 Pa
Accuracy	±1,5% or (±6 Pa < 250 Pa) of selected pressure range	±1,5% of full scale	
Response Time	0.8 / 4s selectable by jumper		
Max. pressure	25 kPa		
Bursting pressure	50 kPa		
Suitable media	Air and non-aggressive gases		
Measuring element	Piezoresistive		
Electrical interface (3-wire)			
	Supply Voltage	24 VAC or VDC	
	Max. Tolerance	±10%	
	Power Consumption	<1.0 W (<1.5 W with I _{out} 20 mA)	
	Output Signal	0...10 VDC, Load R minimum 1kΩ or 4...20 mA, maximum load 500Ω	
Materials			
	Housing	ABS	
	Cover	ABS	
	Pressure Connections	ABS	
	Duct Connectors	ABS	
	Tubeing	PVC, soft	
Connections			
	Electrical Connections	4 screw terminals, max 1.5 mm ²	
	Cable Entry	M16	
	Pressure Connections	Male Ø 5,0 mm and 6,3 mm	
Weight	150 grams, with accessories 290 grams		
Dimensions	90,0 x 71,5 x 36,0 mm		
General Ambient Condition			
	Temperature Range Operation	-10...+50°C (-5...+50°C for -AZ model)	
	Storage	-20...+70°C	
	Ambient Humidity	0 to 95% RH	
Protection Class	IP54		
CE Compliance	Johnson Controls, Inc., declares that these products are in compliance with the essential requirements and other relevant provisions of the EMC Directive 2004/108/EC.		



Building Efficiency

Headquarters: Milwaukee, Wisconsin, USA
Branch Offices: Principal Cities World-wide

Metasys® and Johnson Controls® is registered trademark of Johnson Controls, Inc.
All marks herein are the marks of their respective owners.

© Copyright 2011 Johnson Controls, Inc. All rights reserved. Any unauthorized use or copying is strictly prohibited.

www.johnsoncontrols.com